

## **Hodge Clemco Ltd**

### **RM21 Deadman Handle**

#### **RM 21A Deadman Handle**

(Complete handle includes items 1-6)

Item	Part No.	Description
9	RCAMV 11	SLIDE VALVE
8	RCAMV 8	ELBOW
7	RCAMV 10	TEE
6	RM 27	HANDLE SPRING
5	RM 25C	HANDLE BLADE
4	RM 41	EXTERNAL CIRCLIP
3	RM 26A	HANDLE PIN
2	RM 22	RUBBER INSERT
1	RM 23	1/4" MALE/MALE ADAPTOR

#### **RCAMV 6 Deadman Handle**

(Complete handle including items 1-9)

Used in conjunction with Remote Control Metering Valve

#### **Installation Instructions**

The RM 21A Deadman Handle is designed for use with Hodge Clemco blast machines incorporating a remote control system.

These instructions must be used in conjunction with those contained in the blast machine Owner's Manual.

## WARNING: Ensure compressed air supply is turned OFF and disconnected prior to fitting.

- Remove existing deadman handle & securely fit the RM 21A to the blast hose adjacent to the nozzle holder using hose ties.
- 2. Securely connect the 1/4" 'red' supply control hose to port R on the rear of the RM21A & the 1/4" 'yellow' signal hose to port Y.
- **3.** Using tape or hose ties secure the control hoses to the blast hose at metre intervals to prevent snagging.
- **4.** Check rubber insert is in good condition & correctly positioned.
- **5.** Check handle lever operates freely.
- **6.** Follow normal operating procedures in blast machine Owner's Manual.

# 

#### Hodge Clemco Ltd. Surface Treatment & Finishing Equipment

Portable Abrasive Blast Cleaning Equipment JBlast Expendable Abrasive

Closed Circuit Blast Cleaning Systems

Hand Blast Cabinets Recyclable Abrasives

Vacuum and Mechanical Recovery Systems Pipe Internal Cleaning & Coating Equipment Blastrooms Spraybooths Filter Media

Airless/Air Assisted Spray Coating Equipment

Servicing

Approved Training Courses

Hodge Clemco Ltd. Orgreave Drive, Sheffield, South Yorkshire. S13 9NR

Tel: 0114 254 8811 Fax: 0114 254 0250

www.hodgeclemco.co.uk email: sales@hodgeclemco.co.uk

